


580 SERIES

Elements

- Conforms with N.E.C. requirements
- Hospital grade receptacles
- Modular design
- Combines with Chemetron 500/560 Series Medical gas Outlet Stations
- Blank modules for custom services
- U/L Listed components

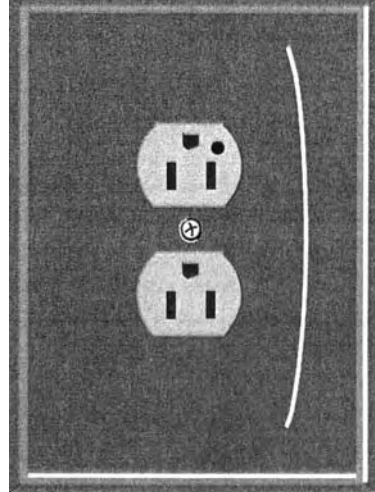

Description

The **580 Series** modular electrical devices provide a convenient method to provide electrical services in patient care locations. They gang with any modular outlet or another electrical device to provide a finished console.

The modular electrical devices are field gangable in any order desired by the facility. The device includes the electrical mechanism and two galvanized steel electrical boxes mounted in a zinc-plated steel mounting plate for corrosion resistance and fire safety. Finish plates are die-cast zinc, chrome-plated for appearance and to match Chemetron modular gas outlets. A blank version is available for field punching to non-standard devices.

Ordering Information	
Item Number	Description
#32-64-07-0001	120 V 20 AMP 23000HG Twist Lock
#32-64-07-0010	120 V 15 AMP 82000HG Ivory Duplex
#32-64-07-0011	120 V 15 AMP 82000HG Red Duplex
#32-64-07-0020	120 V 20 AMP 83000HG Ivory Duplex
#32-64-07-0021	120 V 20 AMP 83000HG Red Duplex
#32-64-07-0030	120 V 15 AMP SG62 Safety Ivory Duplex
#32-64-07-0031	120 V 15 AMP SG62 Safety Red Duplex
#32-64-07-0040	Switch Ivory SPST
#32-64-07-0041	Switch Red SPST lighted Handle
#32-64-07-0042	Switch Ivory 3 Way
#32-64-07-0060	Ground SLR 3S Double
#32-64-07-0070	Blank